



SUPREMACY® REACH INS

Service, Installation and Care Manual

Please read this manual completely before attempting to install or operate this equipment! Notify carrier of damage! Inspect all components immediately. See page 2.



IMPORTANT INFORMATION
READ BEFORE USE
PLEASE SAVE THESE INSTRUCTIONS!

Effective Date April 2004

CONTENTS

| | |
|-------------------------------------|----------|
| RECEIVING AND INSPECTING UNIT | 2 |
| MECHANICAL DATA | 3-7 |
| INSTALLATION | 8-9 |
| OPERATION | 9 |
| ROUTINE MAINTENANCE | 9-10 |
| ERC CONTROL | 11 |
| DEFROST TIMER | 12 |
| WIRING DIAGRAM | 13-17 |
| REPLACEMENT PARTS LIST | 18-21 |
| STANDARD LABOR GUIDELINES | 22 |
| STANDARD WARRANTIES | 23-24 |
| AUTHORIZED PARTS DEPOTS | BACKPAGE |

SERIAL NUMBER LOCATION

On refrigeration and freezer storage units, the serial tag is located inside the right most door (the only door on a one-door unit), near the top front corner of the right interior wall.

Always have the serial number of your unit available when calling for parts or service. A complete list of authorized Delfield parts depots is shown on the back cover of this manual.

This manual ©2004 The Delfield Company. All rights reserved. Reproduction without written permission is prohibited. Supremacy Series and Delfield are registered trademarks of The Delfield Company

RECEIVING AND INSPECTING THE EQUIPMENT

Even though most equipment is shipped crated, care should be taken during unloading so the equipment is not damaged while being moved into the building.

1. Visually inspect the exterior of the package and skid or container. Any damage should be noted and reported to the delivering carrier immediately.
2. If damaged, open and inspect the contents with the carrier.
3. In the event that the exterior is not damaged, yet upon opening, there is concealed damage to the equipment notify the carrier. Notification should be made verbally as well as in written form.
4. Request an inspection by the shipping company of the damaged equipment. This should be done within 10 days from receipt of the equipment.
5. Check the lower portion of the unit to be sure legs or casters are not bent.
6. Also open the compressor compartment housing and visually inspect the refrigeration package. Be sure lines are secure and base is still intact.
7. Freight carriers can supply the necessary damage forms upon request.
8. Retain all crating material until an inspection has been made or waived.

SUPREMACY REACH IN SPECIFICATIONS

SOLID DOOR REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|---------------------|-------------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRR1-S | 115 | 8.5 | 24.96 | 12.81 | 3 | 1/4 | 758 | 2015 | 418 | 5-15P |
| SRR2-S | 115 | 12.8 | 51.92 | 27.54 | 6 | 1/3 | 1374 | 2522 | 650 | 5-20P |
| SRR3-S | 115 | 8.9 | 78.89 | 42.47 | 9 | 1/2 | 1971 | 3637 | 830 | 5-15P |
| FREEZER | | | | | | | | | | |
| SFR1-S | 115 | 11.4 | 24.96 | 12.81 | 3 | 1/2 | 1239 | 1868 | 440 | 5-15P |
| SFR2-S | 115 | 16.0 | 51.92 | 27.54 | 6 | 3/4 | 2247 | 3326 | 710 | 5-20P |
| SFR3-S | 115/208-230 | 11.4 | 78.89 | 42.47 | 9 | 1 | 3222 | 4136 | 960 | NA |

GLASS DOOR REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|---------------------|-------------|------|--------------------|--------------------|-----------------|-------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRR1-G | 115 | 8.5 | 24.96 | 12.81 | 3 | 1/4 | 982 | 2251 | 428 | 5-15P |
| SRR2-G | 115 | 9.9 | 51.92 | 27.54 | 6 | 1/3 | 1853 | 2801 | 670 | 5-15P |
| SRR3-G | 115 | 8.9 | 78.89 | 42.27 | 9 | 1/2 | 2709 | 4046 | 860 | 5-15P |
| FREEZER | | | | | | | | | | |
| SFR1-G | 115 | 13.7 | 24.96 | 12.81 | 3 | 1/2 | 1605 | 2300 | 450 | 5-20P |
| SFR2-G | 115/208-230 | 9.3 | 51.92 | 27.54 | 6 | 1 | 3009 | 3843 | 730 | NA |
| SFR3-G | 115/208-230 | 10.0 | 78.89 | 42.27 | 9 | 1 1/2 | 4386 | 5940 | 990 | NA |

DUAL TEMP

| MODEL | DESCRIPTION | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|----------|---------------|---------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| SD6R1-SH | TOP - 1/2 FRZ | 115 | 10.0 | 11.94 | 8.54 | 2 | 1/2 | 1239 | 1868 | 545 | 5-15P |
| | BOT - 1/2 REF | | | 11.94 | 8.54 | 2 | | | | | |
| SD2R2-S | RIGHT DR FRZ | 115 | 8.5 | 24.96 | 12.81 | 3 | 1/2 | 1239 | 1868 | 730 | 5-15P |
| | LEFT DR REF | 115 | 11.4 | 24.96 | 12.81 | 3 | 1/4 | 758 | 2015 | | 5-15P |
| SD4R3-S | LEFT DR REF | 115 | 8.5 | 24.96 | 12.81 | 3 | 1/4 | 758 | 2015 | 1024 | 5-15P |
| | RIGHT DR FRZ | 115 | 16.0 | 51.92 | 27.54 | 6 | 3/4 | 2247 | 3326 | | 5-20P |

SOLID AND GLASS DOOR HEATED UNITS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|------------------------|-------------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| STAINLESS DOORS | | | | | | | | | | |
| SHR1-S | 115/208-240 | 9.0 | 24.96 | 12.81 | 3 | NA | NA | NA | 428 | NA |
| SHR2-S | 115/208-240 | 16.0 | 51.92 | 27.54 | 6 | NA | NA | NA | 596 | NA |
| SHR3-S | 115/208-240 | 17.8 | 78.89 | 42.27 | 9 | NA | NA | NA | 782 | NA |
| GLASS DOORS | | | | | | | | | | |
| SHR1-G | 115/208-240 | 9.0 | 24.96 | 12.81 | 3 | NA | NA | NA | 438 | NA |
| SHR2-G | 115/208-240 | 16.0 | 51.92 | 27.54 | 6 | NA | NA | NA | 569 | NA |
| SHR3-G | 115/208-240 | 17.8 | 78.89 | 42.27 | 9 | NA | NA | NA | 812 | NA |

SUPREMACY REACH IN SPECIFICATIONS

SOLID DOOR NARROW REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|---------------------|-------------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRR1N-S | 115 | 8.5 | 20.97 | 10.59 | 3 | 1/4 | 713 | 2015 | 398 | 5-15P |
| SRR2N-S | 115 | 12.8 | 43.94 | 23.10 | 6 | 1/3 | 1285 | 2522 | 588 | 5-20P |
| SRR3N-S | 115 | 8.9 | 66.90 | 35.61 | 9 | 1/2 | 1837 | 3637 | 797 | 5-15P |
| FREEZER | | | | | | | | | | |
| SFR1N-S | 115 | 11.4 | 20.97 | 10.59 | 3 | 1/2 | 1166 | 1629 | 408 | 5-15P |
| SFR2N-S | 115 | 16 | 43.94 | 23.10 | 6 | 3/4 | 2101 | 3326 | 680 | 5-20P |
| SFR3N-S | 115/208-230 | 11.4 | 66.90 | 35.61 | 9 | 1 | 3004 | 4253 | 912 | NA |

SOLID DOOR SHALLOW REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|---------------------|-------------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRR1S-S | 115 | 8.5 | 18.25 | 8.98 | 3 | 1/4 | 674 | 2015 | 396 | 5-15P |
| SRR2S-S | 115 | 12.8 | 37.96 | 19.04 | 6 | 1/3 | 1263 | 2522 | 586 | 5-20P |
| SRR3S-S | 115 | 8.9 | 57.57 | 29.10 | 9 | 1/2 | 1832 | 3637 | 795 | 5-15P |
| FREEZER | | | | | | | | | | |
| SFR1S-S | 115 | 11.4 | 18.25 | 8.98 | 3 | 1/2 | 1102 | 1629 | 406 | 5-15P |
| SFR2S-S | 115 | 16 | 37.96 | 19.04 | 6 | 3/4 | 2064 | 3326 | 676 | 5-20P |
| SFR3S-S | 115/208-230 | 11.4 | 57.67 | 29.10 | 9 | 1 | 2995 | 4253 | 909 | 14-20P |

GLASS DOOR SHALLOW REFRIGERATORS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|---------------------|---------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRR1S-G | 115 | 8.5 | 18.25 | 8.98 | 3 | 1/4 | 674 | 2015 | 572 | 5-15P |
| SRR2S-G | 115 | 11.2 | 37.96 | 19.04 | 6 | 1/3 | 1263 | 2522 | 846 | 5-15P |

SUPREMACY PASS THROUGH SPECIFICATIONS

SOLID DOOR REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|--------------|-------------|------|--------------------|--------------------|-----------------|-------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRPT1-S | 115 | 12.8 | 26.64 | 12.81 | 3 | 1/3 | 968 | 2354 | 455 | 5-20P |
| SRPT2-S | 115 | 11.2 | 55.42 | 27.54 | 6 | 1/2 | 1843 | 3637 | 700 | 5-15P |
| SRPT3-S | 115/208-230 | 12.4 | 84.19 | 42.27 | 9 | 3/4 | 2698 | 6744 | 972 | NA |
| FREEZER | | | | | | | | | | |
| SFPT1-S | 115 | 13.7 | 26.64 | 12.81 | 3 | 1/2 | 1583 | 2467 | 672 | 5-20P |
| SFPT2-S | 115/208-230 | 7.0 | 55.42 | 27.54 | 6 | 1 | 3013 | 3497 | 1001 | NA |
| SFPT3-S | 115/208-230 | 10.0 | 84.19 | 42.27 | 9 | 1 1/2 | 4412 | 5185 | 1268 | NA |

GLASS DOOR REFRIGERATORS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|--------------|-------------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRPT1-G | 115 | 12.8 | 26.64 | 12.81 | 3 | 1/3 | 1537 | 2614 | 476 | 5-20P |
| SRPT2-G | 115 | 11.2 | 55.42 | 27.54 | 6 | 1/2 | 3001 | 4046 | 740 | 5-15P |
| SRPT3-G | 115/208-230 | 12.4 | 84.19 | 42.27 | 9 | 3/4 | 4451 | 7569 | 1032 | NA |

SOLID/GLASS DOOR REFRIGERATED AND FREEZER UNITS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|--------------|-------------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | |
| SRPT1-GS | 115 | 12.8 | 26.64 | 12.81 | 3 | 1/3 | 1253 | 2614 | 632 | 5-20P |
| SRPT2-GS | 115 | 11.2 | 55.42 | 27.54 | 6 | 1/2 | 2422 | 4046 | 1001 | 14-20P |
| SRPT3-GS | 115/208-230 | 12.4 | 84.19 | 42.27 | 9 | 3/4 | 3575 | 7569 | 1288 | NA |
| FREEZER | | | | | | | | | | |
| SFPT1-GS | 115 | 13.7 | 26.64 | 12.81 | 3 | 1/2 | 2010 | 2467 | 961 | 5-20P |

SOLID AND GLASS DOOR HEATED UNITS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|--------------|-------------|------|--------------------|--------------------|-----------------|------|--------------------|----------------------|----------------|--------------|
| SOLID | | | | | | | | | | |
| SHPT1-S | 120/208-240 | 9.0 | 24.96 | 12.81 | 3 | NA | NA | NA | 398 | NA |
| SHPT2-S | 120/208-240 | 16.0 | 55.42 | 27.54 | 6 | NA | NA | NA | 632 | NA |
| SHPT3-S | 120/208-240 | 17.8 | 78.89 | 42.27 | 9 | NA | NA | NA | 815 | NA |
| SOLID NARROW | | | | | | | | | | |
| SHPT2N-S | 120/208-240 | 16.0 | 46.0 | | 6 | NA | NA | NA | 915 | NA |
| SHPT3N-S | 120/208-240 | 17.8 | 64.0 | | 9 | NA | NA | NA | 1195 | NA |

SUPREMACY ROLL IN SPECIFICATIONS

SOLID DOOR REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | RACK CAP. | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|---------------------|-------------|------|--------------------|--------------------|-----------------|--------------|-------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | | |
| SRRI1-S | 115 | 9.0 | 36.15 | NA | NA | 1 | 1/3 | 1207 | 2354 | 476 | 5-15P |
| SRRI2-S | 115 | 12.2 | 74.72 | NA | NA | 2 | 1/2 | 2221 | 3637 | 768 | 5-15P |
| SRRI3-S | 115/208-230 | 10 | 113.28 | NA | NA | 3 | 3/4 | 3229 | 6744 | 1044 | NA |
| FREEZER | | | | | | | | | | | |
| SFRI1-S | 115 | 13.7 | 36.15 | NA | NA | 1 | 1/2 | 1516 | 2094 | 497 | 5-20P |
| SFRI2-S | 115/208-230 | 9.3 | 74.72 | NA | NA | 2 | 1 | 2714 | 3497 | 798 | NA |
| SFRI3-S | 115/208-230 | 11.8 | 113.28 | NA | NA | 3 | 1 1/2 | 3901 | 5394 | 1152 | NA |

GLASS DOOR REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | RACK CAP. | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|-------------------------|-------------|------|--------------------|--------------------|-----------------|--------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATOR | | | | | | | | | | | |
| SRRI1-G | 115 | 9.2 | 36.15 | NA | NA | 1 | 1/3 | 1331 | 2614 | 487 | 5-15P |
| SRRI2-G | 115 | 12.2 | 74.72 | NA | NA | 2 | 1/2 | 2512 | 4046 | 798 | 5-15P |
| SRRI3-G | 115/208-230 | 10.0 | 113.28 | NA | NA | 3 | 3/4 | 3687 | 7569 | 1152 | NA |
| FREEZER (REMOTE) | | | | | | | | | | | |
| SFRI1R-G | 115 | 10.2 | 36.15 | NA | NA | 1 | 1/2* | 1844 | NA | 497 | NA |
| SFRI2R-G | 115 | 10.2 | 74.72 | NA | NA | 2 | 1* | 3413 | NA | 756 | NA |
| SFRI3R-G | 115 | 13.5 | 113.28 | NA | NA | 3 | 1½* | 4973 | NA | 1070 | NA |

*Recommended

SOLID AND GLASS DOOR HEATED UNITS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | RACK CAP. | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|--------------------|-------------|------|--------------------|--------------------|-----------------|--------------|------|--------------------|----------------------|----------------|--------------|
| SOLID DOORS | | | | | | | | | | | |
| SHRI1-S | 120/208-240 | 9.0 | 36.15 | NA | NA | 1 | NA | NA | NA | 459 | NA |
| SHRI2-S | 120/208-240 | 16.0 | 74.72 | NA | NA | 2 | NA | NA | NA | 704 | NA |
| SHRI3-S | 120/208-240 | 17.8 | 113.28 | NA | NA | 3 | NA | NA | NA | 1008 | NA |
| GLASS DOORS | | | | | | | | | | | |
| SHRI1-G | 120/208-240 | 9.0 | 36.15 | NA | NA | 1 | NA | NA | NA | 465 | NA |
| SHRI2-G | 120/208-240 | 16.0 | 74.72 | NA | NA | 2 | NA | NA | NA | 728 | NA |
| SHRI3-G | 120/208-240 | 17.8 | 113.28 | NA | NA | 3 | NA | NA | NA | 1041 | NA |

SUPREMACY ROLL THROUGH SPECIFICATIONS

SOLID DOOR REFRIGERATORS AND FREEZERS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | RACK CAP. | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|--------------------------|-------------|------|--------------------|--------------------|-----------------|--------------|--------|--------------------|----------------------|----------------|--------------|
| REFRIGERATORS | | | | | | | | | | | |
| SRRT1-S | 115 | 12.4 | 38.58 | NA | NA | 1 | 1/2 | 1706 | 2805 | 494 | 5-15P |
| SRRT2-S | 115/208-230 | 10.1 | 79.74 | NA | NA | 2 | 3/4 | 3263 | 6165 | 736 | NA |
| SRRT3-S | 115/208-230 | 11.3 | 120.90 | NA | NA | 3 | 3/4 | 4815 | 6744 | 1056 | NA |
| FREEZERS (Remote) | | | | | | | | | | | |
| SFRT1R-S | 115 | 10.7 | 38.58 | NA | NA | 1 | 1/2* | 1868 | NA | 514 | NA |
| SFRT2R-S | 115 | 10.2 | 79.74 | NA | NA | 2 | 1 1/2* | 3491 | NA | 756 | NA |
| SFRT3R-S | 115 | 14.2 | 120.90 | NA | NA | 3 | 2* | 5104 | NA | 1176 | NA |

*Recommended

SOLID/GLASS DOOR REFRIGERATORS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | RACK CAP. | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|----------------------|-------------|------|--------------------|--------------------|-----------------|--------------|------|--------------------|----------------------|----------------|--------------|
| REFRIGERATORS | | | | | | | | | | | |
| SRRT1-GS | 115 | 12.4 | 38.58 | NA | NA | 1 | 1/2 | 1719 | 3120 | 514 | 5-20P |
| SRRT2-GS | 115/208-230 | 10.1 | 79.74 | NA | NA | 2 | 3/4 | 3322 | 6920 | 766 | 14-20P |
| SRRT3-GS | 115/208-230 | 11.3 | 120.90 | NA | NA | 3 | 3/4 | 6097 | 7569 | 1116 | 14-20P |

SOLID AND GLASS DOOR HEATED UNITS

| MODEL | VOLTAGE | AMPS | STORAGE CU. FT. | SHELVES SQ. FT. | # OF SHELVES | RACK CAP. | H.P. | BTU/HR CAB LOAD | BTU/HR SYSTEM CAP | SHIP WEIGHT | NEMA PLUG |
|------------------|-------------|------|--------------------|--------------------|-----------------|--------------|------|--------------------|----------------------|----------------|--------------|
| STAINLESS | | | | | | | | | | | |
| SHRT1-S | 120/208-240 | 9.0 | 38.58 | NA | NA | 1 | NA | NA | NA | 504 | NA |
| SHRT2-S | 120/208-240 | 16.0 | 79.74 | NA | NA | 2 | NA | NA | NA | 806 | NA |
| SHRT3-S | 120/208-240 | 17.8 | 120.90 | NA | NA | 3 | NA | NA | NA | 940 | NA |
| GLASS | | | | | | | | | | | |
| SHRT1-GS | 120/208-240 | 9.0 | 38.58 | NA | NA | 1 | NA | NA | NA | 519 | NA |
| SHRT2-GS | 120/208-240 | 16.0 | 79.74 | NA | NA | 2 | NA | NA | NA | 836 | NA |
| SHRT3-GS | 120/208-240 | 17.8 | 120.90 | NA | NA | 3 | NA | NA | NA | 985 | NA |

INSTALLATION REACH-INS AND PASS THROUGHES

Location

Units represented in this manual are for indoor use only. Be sure the location chosen has a floor strong enough to support the total weight of the cabinet and contents. Allow for a total load of approximately 600 pounds (273kg) per door section. Reinforce the floor if necessary to provide for maximum loading. For the most efficient operation, be sure to provide good air circulation inside and out.

Inside cabinet: Take care not to block air flow to the fans or heating elements and allow space along the front, back and sides.

Outside cabinet: Be sure that the unit has access to ample air; avoid hot corners and locations near stoves and ovens. Always provide a minimum of 12 inches (30.5 cm) of clearance above the unit that is open to the front.

If the doors need to be removed during installation: Remove top hinge cover, remove screw with Allen wrench. Then remove the spring tension nut, then the door can be lifted and removed.

Leveling

A level cabinet looks better and will perform better because the doors will line up with the door frames properly, and the cabinet will not be subject to unnecessary strain.

Stabilizing

It is very important that all legs are properly adjusted to keep the unit level, evenly distribute the weight and to make sure the unit will not rock, lean or be unstable.

The cabinet must be installed in a stable condition with casters locked when unit is in use.



Electrical connection

Refer to the amperage data on pages 3-7 or the serial tag data and your local code or the National Electrical Code to be sure the unit is connected to the proper power source. A protected circuit of the correct voltage and amperage must be run for connection of the supply cord or permanent connection to the unit. The power must be turned off and disconnected whenever performing maintenance or repair functions.



Permanently connected units must be connected in accordance with NEC Article 422 Appliances. C-Disconnecting means. It is the responsibility of the end user to provide the disconnect means to satisfy the authority having jurisdiction.



Large cabinets should always be moved with extreme care and caution.

INSTALLATION ROLL-INS AND ROLL-THROUGHS

Location

Units represented in this manual are for indoor use only. Be sure the location chosen has a floor strong enough to support the total weight of the cabinet and contents. Allow for a total load of approximately 1000 pounds (450kg) per door section. Reinforce the floor if necessary to provide for maximum loading. For the most efficient operation, be sure to provide good air circulation inside and out.

Inside cabinet: Take care not to block air flow to the fans or heating elements and allow space along the front, back and sides.

Outside cabinet: Be sure that the unit has access to ample air; avoid hot corners and locations near stoves and ovens. Always provide a minimum of 12 inches (30.5 cm) of clearance above the unit that is open to the front.

If the doors need to be removed during installation: Remove top hinge cover, remove screw with Allen wrench. Then remove the spring tension nut, then the door can be lifted and removed.

Leveling

A level cabinet looks better and will perform better because the doors will line up with the door frames properly, and the cabinet will not be subject to unnecessary strain.

Unit Installation - Surface Mounted

Large cabinets should always be moved with extreme care and caution.

The surface mounting installation method uses stainless steel ramps to allow entry into the cabinet (one ramp provided with roll-in models, two with roll-through models).

1. Install a minimum of 1" (2.5cm) of cork insulation (or equivalent) in the space under the unit. The insulation should be recessed.
2. Set the unit in place and seal the floor.
3. Install ramp(s). On refrigerators or freezers, when the ramps are properly installed, heat from the heater wire will be transferred to the ramp to prevent condensation.

Electrical connection



Refer to the amperage data on pages 3-11 or the serial tag data and your local code or the National Electrical Code to be sure the unit is connected to the proper power source. A protected circuit of the correct voltage and amperage must be run for connection of the supply cord or permanent connection to the unit. The power must be turned off and disconnected whenever performing maintenance or repair functions.



Permanently connected units must be connected in accordance with NEC Article 422 Appliances. C-Disconnecting means. It is the responsibility of the end user to provide the disconnect means to satisfy the authority having jurisdiction.



Large cabinets should always be moved with extreme care and caution.

OPERATION INFORMATION

The thermostat also has an OFF position that disconnects power to the condensing unit, keep in mind the evaporator fans and lights will still have power while the thermostat is in the OFF position. On freezer units, the lights and defrost timer will still have power as well as the condensate heating elements. During normal operation the freezer temp is preset at approximately 0°F and the refrigerator is preset at approximately 37°F.

OPERATION INFORMATION (HEATED MODELS)

1. Turn the main power switch, located on the top of the control box to the ON position. Turn the night position switch, on front of the control box, to the ON position.
2. Adjust the temperature control to the desired temperature.

The green area on the scale represents the optimum food holding temperature zone of 150°F to 170°F (66°C to 77°C). When the cabinet is warmed up and the temperature stabilized, the cabinet temperature will normally stay within a few degrees of the temperature control set point. The display shows a precise measurement of the actual air temperature within the cabinet, not an average reading. Therefore, it is not unusual to see the temperature vary when the doors are opened. The quick response of the heating system combined with the precision temperature readings provide very accurate control of the cabinet temperature.

3. The light switch (on the glass door models only) controls the display lights inside the cabinet.

The unit is now operating and the display will continually show the current interior cabinet temperature. The night power switch on the front of the control body should be used to turn the unit off at night. There is a five minute delay to allow fans to remove heat before the unit shuts down. This removes latent heat from the heated module preventing high limit lock out. If desired, the main power switch can be turned to the off position once the fan has turned off.



The cabinet interior is very hot! Avoid direct contact with skin; use appropriate protective apparel, such as gloves. The area near the heating duct will be hotter than the rest of the cabinet. Never operate the unit without the duct in place. Use only containers and materials suitable for high temperature applications. Never store combustible materials near the heating appliance.

Removal of the Heated Module

1. Disconnect power.
2. Disconnect power harness.
3. Remove module from unit.



MAINTENANCE

Stainless Steel Care and Cleaning

To prevent discoloration of rust on stainless steel several important steps need to be taken. First, we need to understand the properties of stainless steel. Stainless steel contains 70-80% iron which will rust. It also contains 12-30% chromium which forms an invisible passive film over the steel's surface which acts as a shield against corrosion. As long as the protective layer is intact, the metal is still stainless. If the film is broken or contaminated, outside elements can begin to breakdown the steel and begin to form rust or discoloration.

Proper cleaning of stainless steel requires soft cloths or plastic scouring pads.



NEVER USE STEEL PADS, WIRE BRUSHES OR SCRAPERS!

Cleaning solutions need to be alkaline based or non-chloride cleaners. Any cleaner containing chlorides will damage the protective film of the stainless steel. Chlorides are also commonly found in hard water, salts, and household and industrial cleaners. If cleaners containing chlorides are used be sure to rinse repeatedly and dry thoroughly upon completion.

Routine cleaning of stainless steel can be done with soap and water. Extreme stains or grease should be cleaned with a non-abrasive cleaner and plastic scrub pad. It is always good to rub with the grain of the steel. There are also stainless steel cleaners available which can restore and preserve the finish of the steel's protective layer.

Early signs of stainless steel breakdown can consist of small pits and cracks. If this has begun, clean thoroughly and start to apply stainless steel cleaners in attempt to restore the passivity of the steel.

Never use an acid based cleaning solution! Many food products have an acidic content which can deteriorate the finish. Be sure to clean the stainless steel surfaces of ALL food products. Common items include, tomatoes, peppers and other vegetables.

MAINTENANCE

Cleaning the Condenser Coil

The condenser coil requires regular cleaning, recommended is every 90 days. In some instances though you may find that there is a large amount of debris and dust or grease accumulated prior to the 90 day time frame. In these cases the condenser coil should be cleaned every 30 days.

If the build up on the coil consists of only light dust and debris the condenser coil can be cleaned with a simple brush, heavier dust build up may require a vacuum or even compressed air to blow through the condenser coil.

If heavy grease is present there are de-greasing agents available for refrigeration use and specifically for the condenser coils. The condenser coil may require a spray with the de-greasing agent and then blown through with compressed air.

Failure to maintain a clean condenser coil can initially cause high temperatures and excessive run times, continuous operation with dirty or clogged condenser coils can result in compressor failures. Neglecting the condenser coil cleaning procedures will void any warranties associated with the compressor or cost to replace the compressor.

Never use a high pressure water wash for this cleaning procedure as water can damage the electrical components located near or at the condenser coil.

In order to maintain proper refrigeration performance, the condenser fins must be cleaned of dust, dirt and grease regularly. It is recommended that this be done at least every three months. If conditions are such that the condenser is totally blocked in three months, the frequency of cleaning should be increased. Clean the condenser with a vacuum cleaner or stiff brush. If extremely dirty, a commercially available condenser cleaner may be required.

If your freezer seems to vibrate excessively when the compressor is running, loosen (but do not remove) the bolts on the compressor. Semi hermetic models should be loosened before operating.



The power must be turned off and disconnected whenever performing maintenance or repair functions.

Removable Refrigeration Package

The refrigeration package is removable on all Supremacy Series units.

1. Disconnect power.
2. Remove the thermometer bulb.
3. Remove the front shroud.
4. Disconnect the electrical harness and remove the hold down screws.
5. Lift package as straight up as possible so as not to damage the gasket seal.
6. Keep package upright at all times.

Installation of Refrigeration Package

1. To avoid seal damage, do not slide package into place, carefully set package into locator brackets.
2. Install and tighten all hold down screws.

Heated Storage Cabinets

The heater ducts on heated cabinets are removable for cleaning. When the ducts is sufficiently cool, remove the thumb screws and pull it away from the top of the cabinet. Reverse this procedure to re-install the ducts.



Never operate a heated cabinet without all heater ducts in place!



The interior of heated storage cabinets will be hot for some time after the power is turned off. Avoid touching the interior walls and heater ducts with bare hands or arms until you are certain the unit has cooled. The use of gloves is recommended.

Gasket Maintenance

Gaskets require regular cleaning to prevent mold and mildew build up and also to keep the elasticity of the gasket. Gasket cleaning can be done with the use of warm soapy water. Avoid full strength cleaning products on gaskets as this can cause them to become brittle and prevent proper seals. Also, never use sharp tools or knives to scrape or clean the gasket which could possibly tear the gasket and rip the bellows.

Gaskets can easily be replaced and do not require the use of tools or authorized service persons. The gaskets are "Dart" style and can be pulled out of the groove in the door and new gaskets can be "pressed" back into place.

Doors/Hinges


Over time and with heavy use doors the hinges may become loose. If it is noticed that the door is beginning to sag, it may become necessary to tighten the screws that mount the hinge brackets to the frame of the unit. If the doors are loose or sagging this can cause the hinge to pull out of the frame which may damage both the doors and the door hinges. In some cases this can require qualified service agents or maintenance personnel.

Drain Maintenance

Each unit has a drain located inside the unit which removes the condensation from the evaporator coil and evaporates it at an external condensate evaporator pan. Each drain can become loose or disconnected from moving or bumping the drain. If you notice excessive water accumulation on the inside of the unit be sure the drain tube is connected from the evaporator housing to the condensate evaporator drain pan. If water is collected underneath the unit you may want to check the condensate evaporator drain tube to be sure it is still located inside the drain pan. The leveling of the unit is important as the units are designed to drain properly when on a level surface, if your floor is not level this can also cause drain problems. Be sure all drain lines are free of obstructions, typically food product is found blocking drain lines causing water to back up and overflow the drain pans.

PARAGON TIMER CONTROL

Two and three section units only.

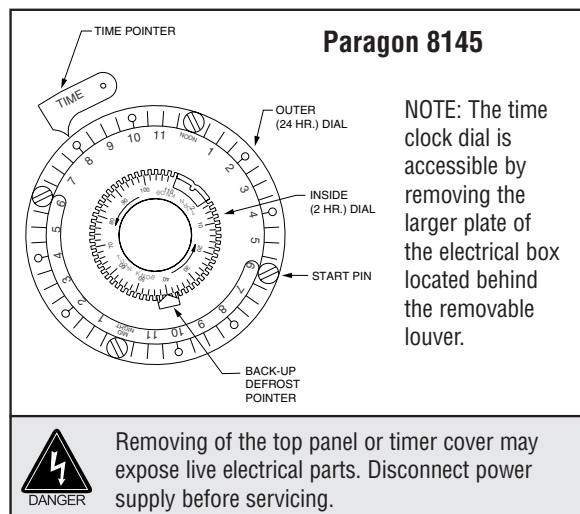

(Figure 1)

Freezer defrost control: All Supremacy two and three door freezers are equipped with a Paragon 8145 defrost control for automatic defrosting of the evaporator coil.

To set time of day (Two & three door models only): Grasp the knob of the Paragon 8145 time clock dial in the center of the inner (2 hour) dial and rotate it in a counter-clockwise direction (see figure 1). This will revolve the outer dial. Continue turning until the correct time of day on the outer dial lines up with the time pointer. This operation requires an initial start-up and any time thereafter when there is an interruption of power to the freezer.

Operation (Two & three door models): The Paragon 8145 timer is preset at the factory to provide four defrosts per day at six hour intervals starting at 6:00 am. If it is necessary to change the number of defrosts due to unusual operating conditions it can be accomplished by placing the pins in the outer dial at the appropriate time of the day that defrost initiation is desired.

Even under the most severe operating conditions it should not be necessary to set the back-up time greater than 60 minutes. Consult the factory if complete de-icing of the coil is not accomplished within this time period.

DEFROST TIMER PROGRAMMING GUIDE (1 DOOR MODELS)

A (2) 4 position dip switch provides user control of defrost duration and cycle time. The selection is as follows.

Defrost Time

| Dip Switch Setting | | | | min |
|--------------------|-----|-----|-----|------|
| off | off | off | off | void |
| on | off | off | off | 5 |
| off | on | off | off | 10 |
| on | on | off | off | 15 |
| on | on | on | off | 20 |
| on | off | on | off | 25 |
| off | on | on | off | 30 |
| on | on | on | off | 35 |
| off | off | off | on | 40 |
| on | off | off | on | 45 |
| off | on | off | on | 50 |
| on | on | off | on | 55 |
| off | off | on | on | 60 |

*Factory settings are highlighted.

Cycle Time


| Dip Switch Setting | | | | hrs |
|--------------------|-----|-----|-----|------|
| off | off | off | off | void |
| on | off | off | off | 2 |
| off | on | off | off | 4 |
| on | on | off | off | 6 |
| on | on | off | on | 8 |
| on | off | on | off | 10 |
| off | on | on | off | 12 |
| on | on | on | off | 14 |
| off | off | off | on | 16 |
| on | off | off | on | 18 |
| off | on | off | on | 20 |
| on | on | off | on | 22 |
| off | off | on | on | 24 |

*Factory settings are highlighted.


NOTE: There is no time adjustment for one door models.

Operation (One door models): The electric defrost controller is preset at the factory to provide a defrost cycle every 6 hours (4 defrosts per day). If it is necessary to change the number of defrosts due to unusual operating conditions, it can be accomplished by adjusting switches 7, 8 and 9 as shown above.

Programming Example

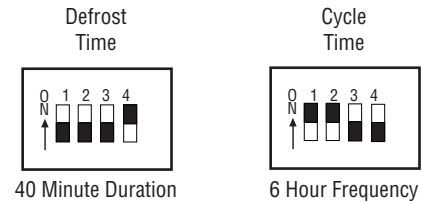


Typical Sequence of Operation

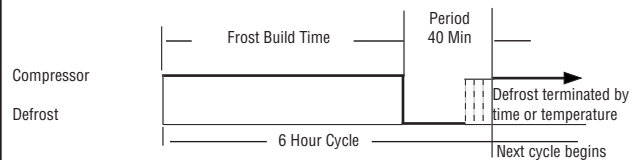

Defrost timer

NOTE: Dip switches shown in preset positions.

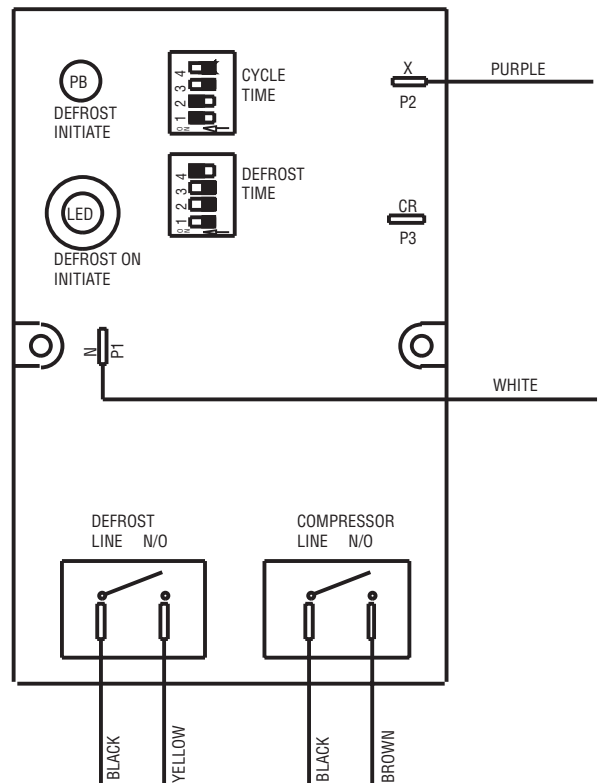

ERC CONTROL (OPTIONAL)

The ERC-2 Electronic Refrigeration Control is a microprocessor-based electronic controller designed to control both the temperature and the defrost functions of a commercial refrigeration unit. Designed for 115 or 208/240 VAC (50 or 60 Hz), the control comes with four relay outputs: compressor, defrost, evaporator fan and alarm.

The ERC-2 includes a digital display module that provides readout of the temperature, time and built-in diagnostics. The display module can be mounted locally or remotely from the unit and it contains a touch keypad for simple programming. For defrost control, it uses a real time clock.

Applications:

This control is NSF certified and it can be applied to many different commercial refrigeration applications like reach-ins, walk-ins, refrigerated cases, or other different products where accurate control of refrigerated space and defrost cycles is required.

Technical Specifications

Input Power: 115/208-240 VAC 50/60Hz (-10%, -15%)
 Zone and Evaporator Temperature Sensor: NTC thermistor: Range -40 to 199°
 Output Relay Ratings:
 Compressor: 1hp@115V
 Defrost: 16A resistive at 115/208-240V pilot duty 470 VA@120/208-240V
 Evaporator fan: 1/2 hp at 120V, 3/4 hp at 208V, 1 hp at 240V
 Alarm: 5A resistive at 115/208V
 Ambient Operating Conditions: -40° to 122°F; 0 to 95% RH
 Agency Certifications UL, CSA, NSF

Special Features

The default parameters for Delfield will be pre-programmed.

In case of a power failure, the control has a safe operating mode in case of sensor failure.

Programming

Accessing

Level 1: Press and hold the SET button for five sec.

Level 2: Press and hold the SET and DOWN button for 10 sec.

Programming

Scroll through the parameters using the UP and DOWN arrow keys. Choose the parameter to be changed by pressing SET. Scrolling through the options or set the time or temperature by using the UP and DOWN arrow keys. Once you choose the option or adjusted the time or temperature, press SET to accept the option.

The ERC-2 control initially powers up displaying 12 AM otherwise it will show the last configured selection (time or temperature). If a power outage occurs during normal operation, the control will maintain the correct time of day using a capacitor (batteries are not required). The time will be maintained for up to 100 hours when the capacitor is fully charged.

To initiate a Manual Defrost, press and hold the MAN DEF key for 3 seconds.

There are two levels of programming in the ERC-2. The first of security will enable the user to set two parameters: Time-of-day (CLOc and setpoint temperature SET). The other level allows access to the other parameters.

Three buttons are used for the programming: SET, UP AND DOWN.


- | | | |
|---------------|-------------------|--|
| STEP 1 | SET | Press and hold SET for 5 seconds. The display will show CLOc |
| STEP 2 | SET | Press SET again to change the time of day. |
| STEP 3 | UP OR DOWN | Press UP or DOWN until the correct time of day is displayed. |
| STEP 4 | SET | Press SET to accept the new time. |
| STEP 5 | DOWN | Press DOWN to go to the next parameter - Set point temperature -SEt (cut out). |
| STEP 6 | SET | Press SET to change the set point temperature. |
| STEP 7 | UP OR DOWN | Press UP or DOWN to go to the desired setpoint. The range is - 40° to 60°F or -40 to 16°C. |
| STEP 8 | SET | Press SET to accept the change. |
| STEP 9 | DOWN | Press DOWN to exit the first level of programming. |



NOTE 1: During programming, if no button is pushed during 30 seconds, the control will go back to the normal operating mode. This is valid for both programming levels.

NOTE 2: When changing the time, press and hold the MAN DEF button for 3 seconds to change the AM/PM mode.


NOTE: By lifting gray plastic cover, buttons can be exposed.

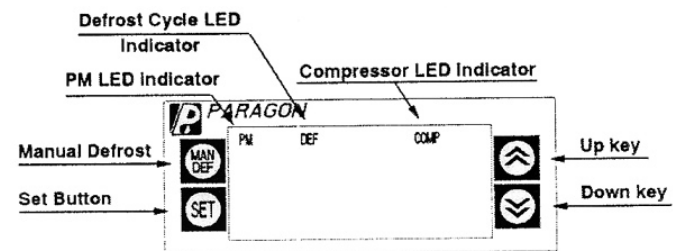

For more information on the ERC Control, please log onto our web site at www.delfield.com and go to the Parts and Service section, then to the Service Department page.


WIRING DIAGRAM SUPREMACY HEATED MODELS 120/208-240v

(One and two door models only.)
WIRING DIAGRAM SUPREMACY
HEATED MODELS
120v/208-240v

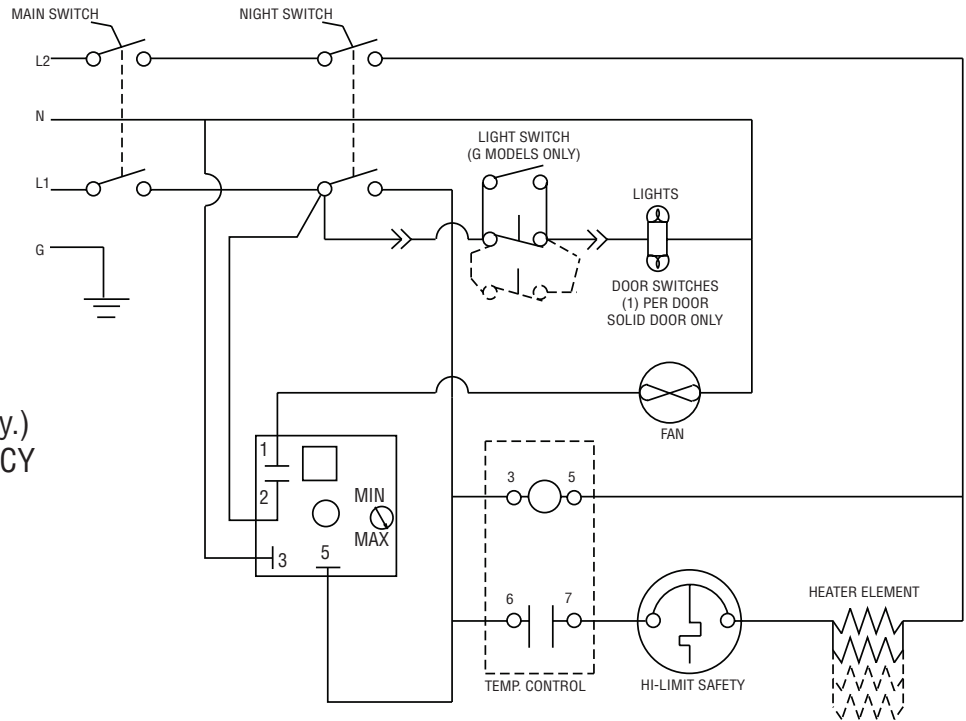

WIRING DIAGRAM SUPREMACY HEATED MODELS 120/208-240v


(Three door models only.)
WIRING DIAGRAM SUPREMACY
HEATED MODELS
120v/208-240v

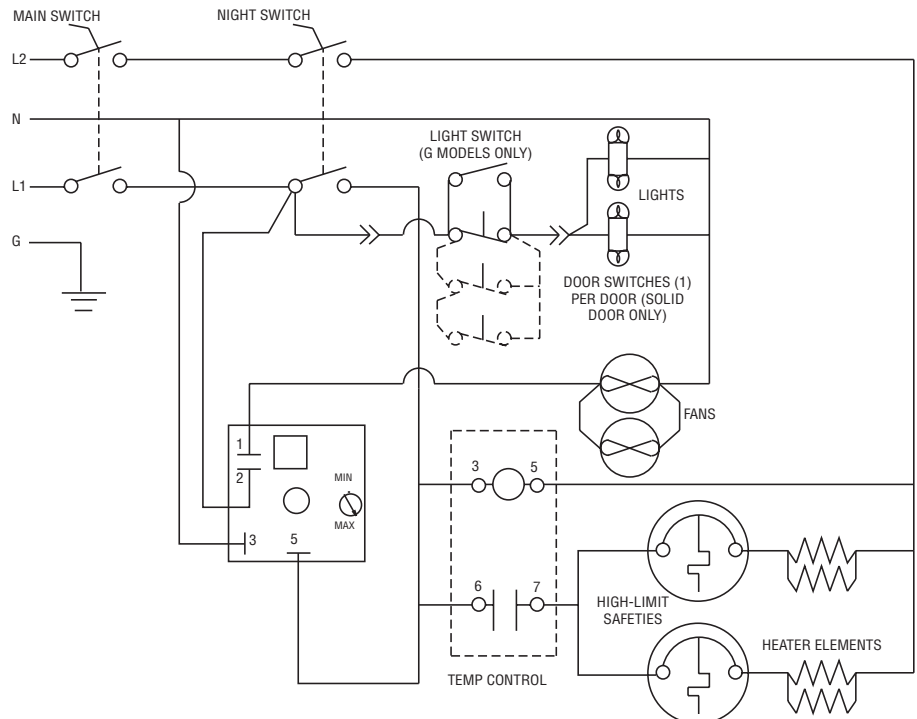





WIRING DIAGRAM SUPREMACY REFRIGERATORS 115/208-230V

- NOTE: Display lights are on "G" models only. Solenoid valve on remote models only. Power cord may or may not be provided. Power switch used with electronic controls only.**

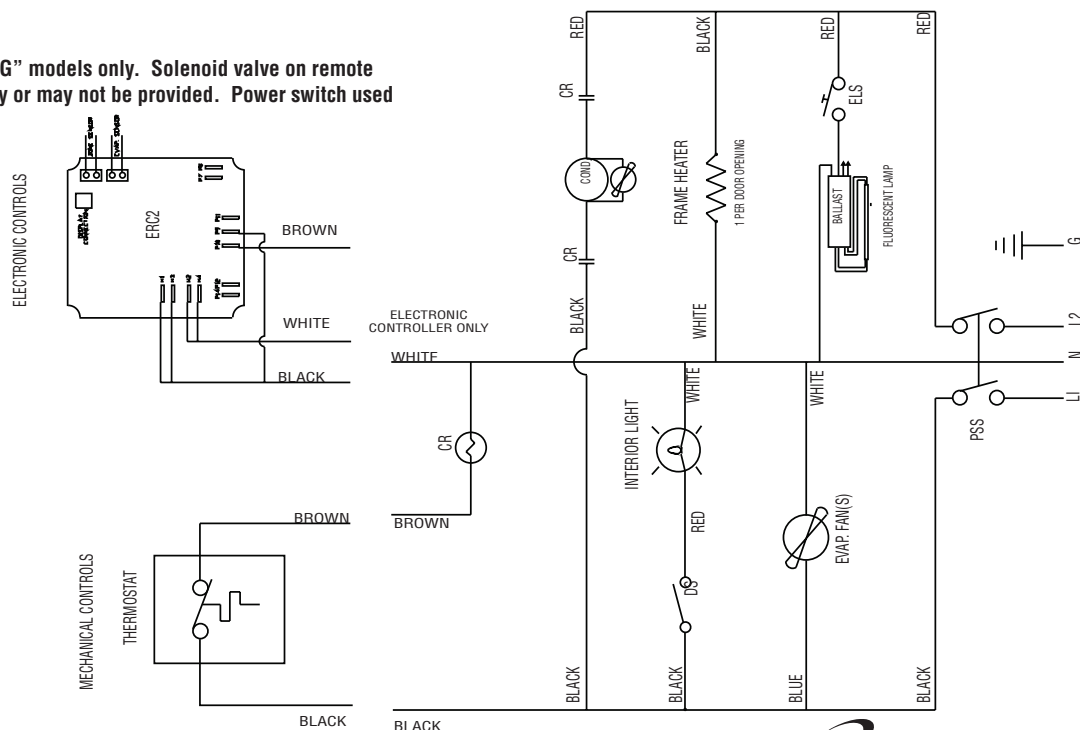

WIRING DIAGRAM SUPREMACY FREEZER 115V


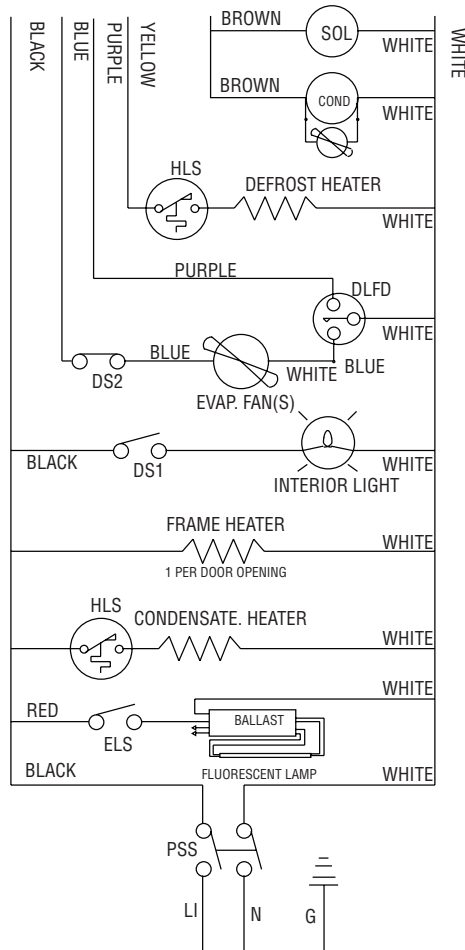
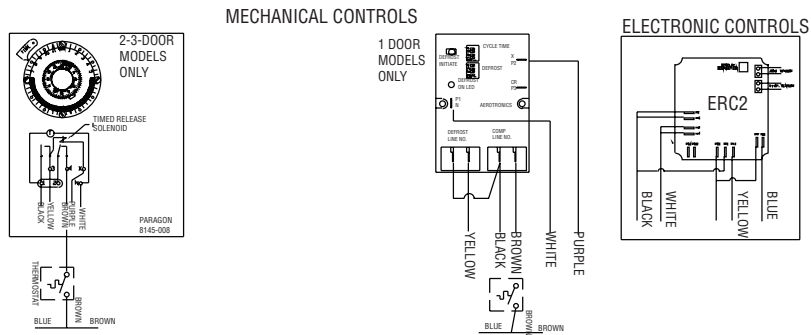


PSS POWER SUPPLY SWITCH
SOL SOLENOID VALVE
HLS HIGH LIMIT SAFETY
COND CONDENSING UNIT
ELS EXTERNAL LIGHT SWITCH
DS DOOR SWITCH
DLFD DEFROST LIMIT FAN DELAY

NOTE: Display lights are on "G" models only. Solenoid valve and condensate heaters are on remote models only. Power cord may or may not be provided. Power switch used with electronic controls only.

WIRING DIAGRAM 115v SUPREMACY FREEZER


WIRING DIAGRAM SUPREMACY FREEZER 115/208-230

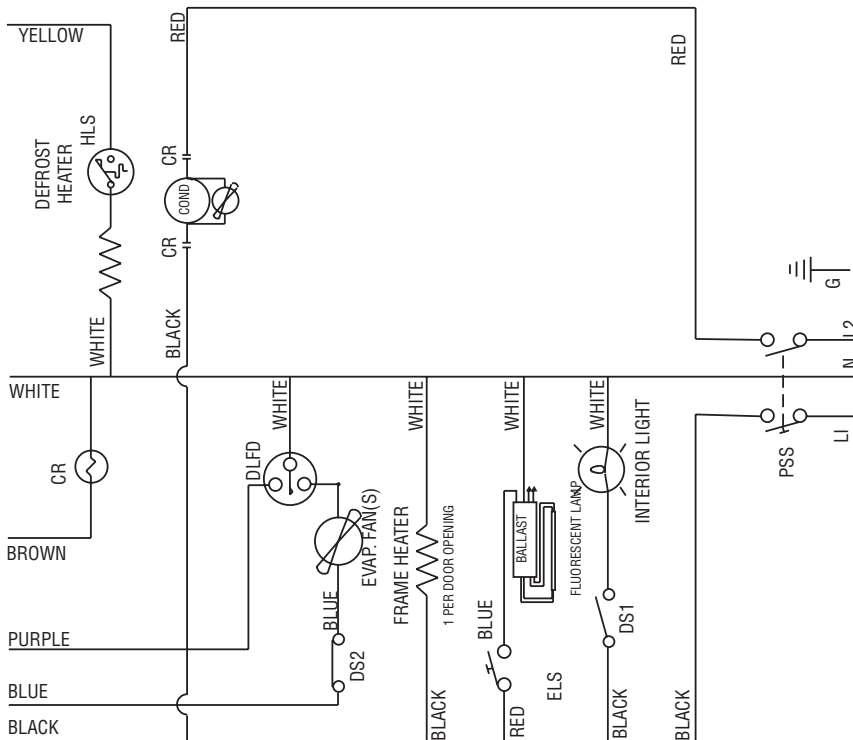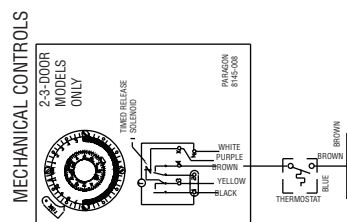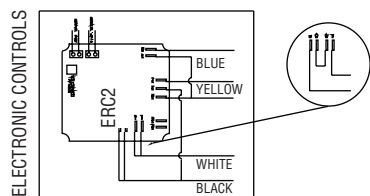

| | |
|------|-------------------------|
| CR | COMPRESSOR RELAY |
| PSS | POWER SUPPLY SWITCH |
| HLS | HIGH LIMIT SAFETY |
| COND | CONDENSING UNIT |
| ELS | EXTERNAL LIGHT SWITCH |
| LPC | LOW PRESSURE CONTROL |
| DS | DOOR SWITCH |
| DLFD | DEFROST LIMIT FAN DELAY |

NOTE: Display lights are on "G" models only. Solenoid valve on remote models only. Power cord may or may not be provided. Power switch used with electronic controls only.

WIRING DIAGRAM SUPREMACY ONE DOOR DUAL TEMP 115V

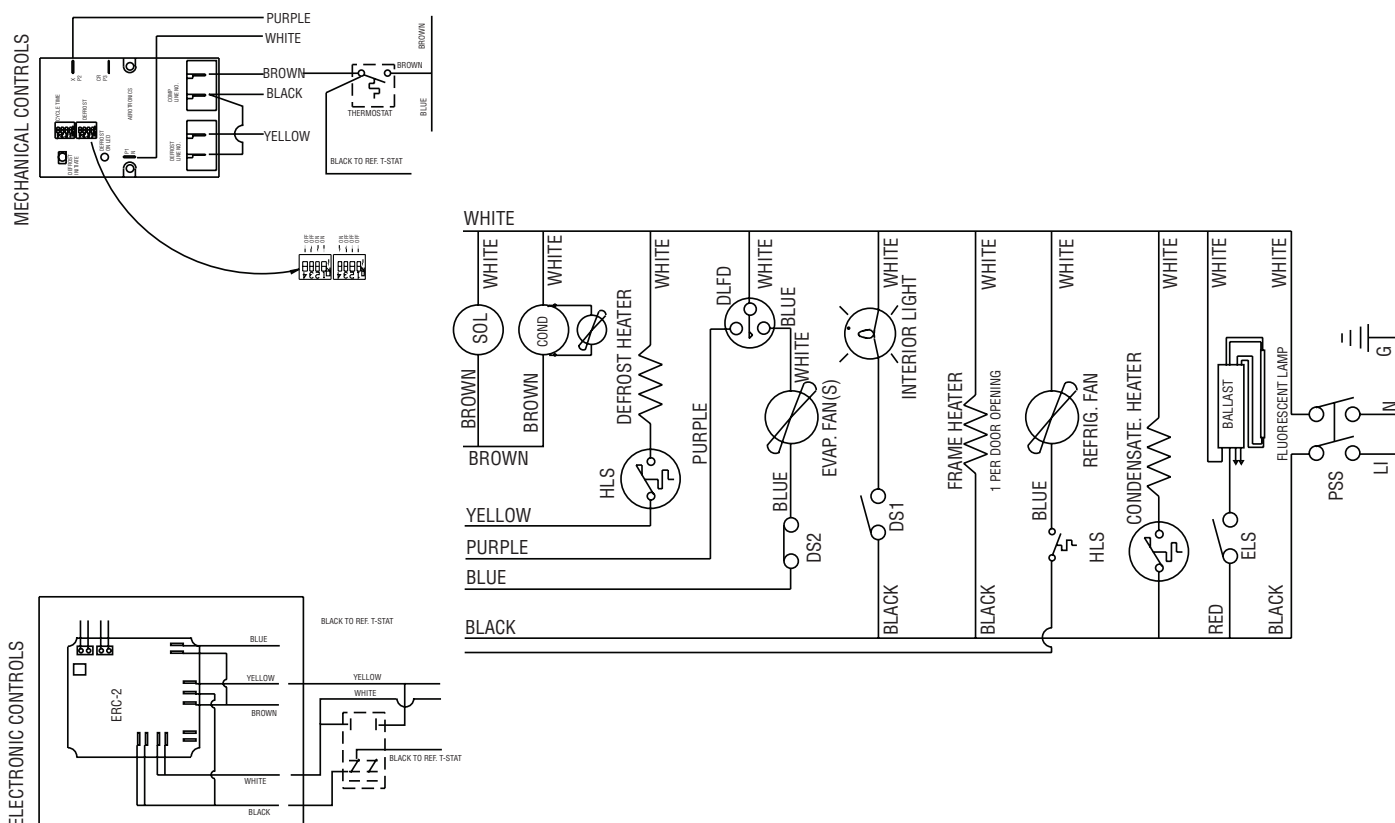

NOTE: Display lights are on "G" models only. Solenoid valve and condensate heaters are on remote models only. Power cord may or may not be provided. Power switch used with electronic controls only.

SUPREMACY REPLACEMENT PARTS LIST

SRRI-G

| Description | Part number |
|---------------------|-------------|
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Light socket | 2194145 |
| Ballast | 2194161 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge with spring | 3234765 |
| Solar thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516273 |
| Evap coil | 3516301 |
| Cond unit | 3526900 |
| Wire shelf | 3978170 |

SFR3-S

| Description | Part number |
|-----------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay/defr. limit | 2194046 |
| Light socket | 2194145 |
| Safety switch | 2194235 |
| Defrost timer | 2194260 |
| Relay | 2194575 |
| Defrost heater | 2194580 |
| Caster | 3234186 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 2324765 |
| Temp control | 3516043 |
| Solar Thermometer | 3516148 |
| Vacuum breaker | 3516204 |
| Pressure regulator | 3516223 |
| Filter drier | 3516227 |
| Evap fan blade | 3516274 |
| Expansion valve | 3516280 |
| Evap coil | 3516305 |
| Cond unit | 3526916 |
| Wire shelf | 3978170 |
| Rocker switch | 5066440 |

SFR2-S

| Description | Part number |
|------------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Safety switch - 2 wire | 2194235 |
| Defrost timer | 2194260 |
| Defrost heater | 2194579 |
| Caster | 3234186 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge with spring | 3234765 |
| Temp control | 3516043 |
| Solar thermometer | 3516148 |
| Filter dryer | 3516191 |
| Pressure regulator | 3516193 |
| Vacuum breaker | 3516204 |
| Evap coil | 3516304 |
| Expansion valve | 3516317 |
| Cond unit | 3526912 |
| Rocker switch | 5066440 |

SFR1-S

| Description | Part number |
|----------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |

| | |
|------------------------|---------|
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Safety switch - 2 wire | 2194235 |
| Defrost heater | 2194405 |
| Caster | 3234186 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Solar thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Vacuum breaker | 3516204 |
| Expansion valve | 3516271 |
| Defrost timer | 3516281 |
| Evap coil | 3516302 |
| Cond unit | 3526908 |
| Wire shelf | 3978170 |
| Rocker switch | 5066440 |

SRR1-S

| Description | Part number |
|-------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Chrome hinge | 3234765 |
| Solar thermometer | 3516148 |
| Filter dryer | 3516191 |
| Evap fan blade | 3516172 |
| Evap coil | 3516273 |
| Expansion valve | 3516301 |
| Cond unit | 3526900 |
| Wire shelf | 3978170 |

SRR2-S

| Description | Part number |
|-------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Chrome hinge | 3234765 |
| Solar thermometer | 3516148 |
| Filter dryer | 3516191 |
| Evap fan blade | 3516274 |
| Evap coil | 3516303 |
| Expansion valve | 3516316 |
| Cond unit | 3526902 |
| Wire shelf | 3978170 |

SRR3-S

| Description | Part number |
|-------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Solar thermometer | 3516148 |
| Evap fan blade | 3516274 |
| Evap coil | 3516307 |
| Expansion valve | 3516316 |
| Cond unit | 3526904 |
| Wire shelf | 3978170 |

SRR2-G

| Description | Part number |
|-------------------|-------------|
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Ballast | 2193998 |
| Lampholder | 2194061 |
| Temp control | 2194224 |
| Caster | 2194349 |
| Lamp | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Solar thermometer | 3516148 |
| Filter dryer | 3516191 |
| Evap fan blade | 3516274 |
| Evap coil | 3516303 |
| Expansion valve | 3516316 |
| Cond unit | 3526902 |
| Wire shelf | 3978170 |

SRR3-G

| Description | Part number |
|--------------------|-------------|
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Ballast | 2194583 |
| Lampholder | 2194061 |
| Leg | 3234039 |
| Temp control | 2194224 |
| Pull-down catch | 3234746 |
| Pull-down stricker | 3234747 |
| Hinge | 3234617 |
| Shelf clip | 3234782 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Full door | 3455479 |
| Solar thermometer | 3516148 |
| Filter dryer | 3516227 |
| Evap fan blade | 3516274 |
| Evap coil | 3516307 |
| Expansion valve | 3516316 |
| Cond unit | 3526904 |
| Wire shelf | 3978170 |

SFR1-G

| Description | Part number |
|------------------------|-------------|
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Light bulb | 2193928 |
| Lampholder LH | 2193939 |
| Lampholder RH | 2193940 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Safety switch - 2 wire | 2194235 |
| Defrost heater | 2194405 |
| Momentary switch | 2194550 |
| Ballast | 2194578 |
| Caster | 3234186 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Solar thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Vacuum breaker | 3516204 |
| Expansion valve | 3516271 |
| Defrost timer | 3516281 |
| Evap coil | 3516302 |
| Cond unit | 3526910 |
| Wire shelf | 3978170 |

SD6R1-SH

| Description | Part number |
|-------------|-------------|
|-------------|-------------|

| | |
|------------------------|---------|
| Door Gasket | 1702636 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Safety switch - 2 wire | 2194235 |
| Momentary switch | 2194341 |
| Defrost heater | 2194405 |
| Temp control | 2194588 |
| Leg | 3234645 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Temp control frzr. | 3516043 |
| Temp control | 3516056 |
| Solar thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Plastic guard | 3516173 |
| Filter dryer | 3516191 |
| Breaker | 3516204 |
| Expansion valve | 3516271 |
| Defrost timer | 3516281 |
| Cond unit | 3526910 |
| Wire shelf | 3978170 |
| Rocker switch | 5066440 |

SD2R2-S

| Description | Part number |
|-------------------------|-------------|
| Door Gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Temp control - ref. | 2194224 |
| Safety switch - 2 wire | 2194235 |
| Momentary switch | 2194341 |
| Defrost heater | 2194405 |
| Leg | 3234645 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Solar thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Vacuum breaker | 3516204 |
| Expansion valve - ref. | 3516271 |
| Expansion valve - frzr. | 3516273 |
| Defrost timer | 3516281 |
| Evap coil - frzr. | 3516301 |
| Evap coil - ref. | 3516302 |
| Cond unit | 3526900 |
| Cond unit | 3526908 |
| Wire shelf | 3978170 |
| Rocker switch | 5066440 |

SD4R3-S

| Description | Part number |
|-----------------------|-------------|
| Door Gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Temp control - 2 wire | 2194224 |
| Safety switch | 2194235 |
| Defrost timer | 2194260 |
| Momentary switch | 2194341 |
| Defrost heater | 2194579 |
| Chrome plated hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Solar thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |



SUPREMACY REPLACEMENT PARTS LIST

| | |
|--------------------|---------|
| Pressure regulator | 3516193 |
| Vacuum breaker | 3516204 |
| Filter dryer | 3516227 |
| Expansion valve | 3516273 |
| Evap fan blade | 3516274 |
| Evap coil - ref. | 3516301 |
| Evap coil - frzr. | 3516304 |
| Expansion valve | 3516317 |
| Cond unit - ref. | 3526900 |
| Cond unit - frzr. | 3526912 |
| Wire shelf | 3978170 |
| Rocker switch | 5066440 |

SHR1-S & SHR2-S

| Description | Part number |
|--------------------|-------------|
| Door Gasket | 1702673 |
| Blower motor | 2162516 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temperature sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Heating element | 2194605 |
| Relay timer | 2194618 |
| Leg | 3234645 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Wire shelf | 3978171 |

SHR3-S

| Description | Part number |
|--------------------|-------------|
| Door Gasket | 1702673 |
| Fan wheel | 2160005 |
| Electric motor | 2160007 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temperature sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Leg | 3234645 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Wire shelf | 3978171 |

SHR1-G

| Description | Part number |
|--------------------|-------------|
| Door Gasket | 1701293 |
| Rocker switch | 2190154 |
| Blower motor | 2162516 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temperature sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Light bulb | 2194379 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Heating element | 2194605 |
| Relay timer | 2194618 |
| Leg | 3234645 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |

| | |
|-------------|---------|
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Wire shelf | 3978171 |

SRR1N-S

| Description | Part number |
|------------------|-------------|
| Door Gasket | 1702638 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Wire shelf | 3978171 |
| Expansion valve | 3516273 |
| Evap coil | 3516301 |
| Cond unit | 3526900 |
| Wire shelf | 3978172 |
| Filter dryer | 3516191 |

SRR2N-S

| Description | Part number |
|------------------|-------------|
| Door Gasket | 1702638 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Wire shelf | 3978171 |
| Filter dryer | 3516191 |
| Evap coil | 3516303 |
| Expansion valve | 3516316 |
| Cond unit | 3526902 |
| Wire shelf | 3978172 |

SRR3N-S

| Description | Part number |
|------------------|-------------|
| Door Gasket | 1702638 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Filter dryer | 3516227 |
| Evap coil | 3516307 |
| Expansion valve | 3516316 |
| Cond unit | 3526904 |
| Wire shelf | 3978172 |
| Evap fan blade | 3516274 |

SFR1N-S

| Description | Part number |
|------------------------|-------------|
| Door Gasket | 1702638 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Safety switch - 2 wire | 2194235 |
| Defrost heater | 2194405 |
| Caster | 3234186 |

| | |
|-----------------|---------|
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Vacuum breaker | 3516204 |
| Expansion valve | 3516271 |
| Defrost timer | 3516281 |
| Evap coil | 3516302 |
| Cond unit | 3526908 |
| Wire shelf | 3978172 |
| Rocker switch | 5066440 |

SFR2N-S

| Description | Part number |
|------------------------|-------------|
| Door Gasket | 1702638 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Safety switch - 2 wire | 2194235 |
| Defrost timer | 2194260 |
| Momentary switch | 2194341 |
| Defrost heater | 2194579 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Pressure regulator | 3516193 |
| Filter dryer | 3516227 |
| Evap fan blade | 3516274 |
| Expansion valve | 3516280 |
| Evap coil | 3516304 |
| Cond unit | 3526912 |
| Wire shelf | 3978172 |
| Rocker switch | 5066440 |

SHR1-S

| Description | Part number |
|------------------|-------------|
| Door gasket | 1702675 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Thermostat | 2194589 |
| Door lock | 3234752 |
| Hinge | 3234766 |
| Thermometer | 3516152 |

SFR1I-S

| Description | Part number |
|-----------------------|-------------|
| Door gasket | 1702637 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket - 2 wire | 2194145 |
| Safety switch | 2194235 |
| Defrost heater | 2194405 |
| Hinge | 3234617 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Vacuum breaker | 3516204 |

| | |
|-----------------|---------|
| Expansion valve | 3516271 |
| Defrost timer | 3516281 |
| Evap coil | 3516302 |
| Cond unit | 3526910 |
| Rocker switch | 5066440 |

SFR13-S

| Description | Part number |
|-----------------------|-------------|
| Door gasket | 1701323 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket - 2 wire | 2194145 |
| Safety switch | 2194235 |
| Defrost heater | 2194580 |
| Hinge | 3234617 |
| Door lock | 3234753 |
| Paragon timer | 2194260 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Evap fan blade | 3516174 |
| Filter dryer | 3516227 |
| Vacuum breaker | 3516204 |
| Expansion valve | 3516317 |
| Evap coil | 3516305 |
| Cond unit | 3526918 |
| Rocker switch | 5066440 |

SRR1I-S

| Description | Part number |
|------------------|-------------|
| Door gasket | 1702637 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Hinge | 3234617 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Expansion valve | 3516273 |
| Evap coil | 3516301 |
| Cond unit | 3526902 |

SFR1S-S

| Description | Part number |
|--------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Cord lead | 2183347 |
| Fan delay - 3 wire | 2194046 |
| Safety switch | 2194235 |
| Leg | 3234039 |
| Defrost heater | 2194405 |
| Hinge | 3234617 |
| Pull-down catch | 3234746 |
| Pull-down stricker | 3234747 |
| Shelf clip | 3234482 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Breaker | 3516204 |
| Pressure regulator | 3516193 |
| Filter dryer | 3516322 |
| Evap fan blade | 3516172 |
| Expansion valve | 3516271 |
| Evap coil | 3516302 |
| Cond unit | 3526908 |
| Wire shelf | 3978174 |
| Rocker switch | 5066440 |

SFR2S-S

| Description | Part number |
|----------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Cord lead | 2183347 |



SUPREMACY REPLACEMENT PARTS LIST

| | |
|--------------------|---------|
| Fan delay - 3 wire | 2194046 |
| Safety switch | 2194235 |
| Leg | 3234039 |
| Defrost heater | 2194579 |
| Hinge | 3234617 |
| Pull-down catch | 3234746 |
| Pull-down stricker | 3234747 |
| Shelf clip | 3234482 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Breaker | 3516204 |
| Pressure regulator | 3516193 |
| Filter dryer | 3516322 |
| Evap fan blade | 3516274 |
| Expansion valve | 3516317 |
| Evap coil | 3516304 |
| Cond unit | 3526912 |
| Wire shelf | 3978174 |
| Rocker switch | 5066440 |

SFR3N-S

| Description | Part number |
|--------------------|-------------|
| Door gasket | 1702638 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Fan delay - 3 wire | 2194046 |
| Light socket | 2194145 |
| Safety switch | 2194235 |
| Defrost timer | 2194260 |
| Relay | 2194575 |
| Defrost heater | 2194580 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Breaker | 3516204 |
| Pressure regulator | 3516223 |
| Filter dryer | 3516227 |
| Evap fan blade | 3516274 |
| Expansion valve | 3516280 |
| Evap coil | 3516305 |
| Cond unit | 3526916 |
| Wire shelf | 3978172 |
| Rocker switch | 5066440 |

SRR1S-S

| Description | Part number |
|------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Expansion valve | 3516273 |
| Coil evap. | 3516301 |
| Cond unit | 3526900 |
| Wire shelf | 3978174 |

SRR2S-S

| Description | Part number |
|----------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |

| | |
|------------------|---------|
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Filter dryer | 3516191 |
| Evap fan blade | 3516274 |
| Evap coil | 3516303 |
| Exp valve | 3516316 |
| Cond unit | 3526902 |
| Wire shelf | 3978174 |

SRR1S-G

| Description | Part number |
|--------------------|-------------|
| Door gasket | 1701292 |
| Fan motor | 2162691 |
| Cord lead | 2183348 |
| Rocker switch | 2190154 |
| Ballast | 2194161 |
| Temp control | 2194224 |
| Leg | 3234039 |
| Hinge | 3234617 |
| Pull-down catch | 3234746 |
| Pull-down stricker | 3234747 |
| Door/drawer lock | 3234753 |
| Shelf clip | 3234782 |
| Full glass door | 3455479 |
| Solar thermometer | 3516148 |
| Fan blade | 3516172 |
| Expansion valve | 3516273 |
| Evap coil | 3516301 |
| Filter dryer | 3516322 |
| Cond unit | 3526900 |
| Wire shelf | 3978174 |

SRR2S-G

| Description | Part number |
|--------------------|-------------|
| Door gasket | 1701292 |
| Fan motor | 2162691 |
| Rocker switch | 2190154 |
| Ballast | 2193998 |
| Temp control | 2194224 |
| Leg | 3234039 |
| Hinge | 3234617 |
| Pull-down catch | 3234746 |
| Pull-down stricker | 3234747 |
| Door/drawer lock | 3234753 |
| Shelf clip | 3234782 |
| Full glass door | 3455479 |
| Solar thermometer | 3516148 |
| Fan blade | 3516174 |
| Expansion valve | 3516316 |
| Evap coil | 3516303 |
| Filter dryer | 3516322 |
| Cond unit | 3526902 |
| Wire shelf | 3978174 |

SRPT3-S

| Description | Part number |
|------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Relay | 2194575 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Filter dryer | 3516227 |
| Evap fan blade | 3516274 |
| Evap coil | 3516308 |
| Exp valve | 3516316 |

| | |
|------------|---------|
| Cond unit | 3526906 |
| Wire shelf | 3978170 |

SRPT2-S

| Description | Part number |
|------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Filter dryer | 3516191 |
| Evap fan blade | 3516274 |
| Evap coil | 3516306 |
| Expansion valve | 3516316 |
| Cond unit | 3526904 |
| Wire shelf | 3978170 |

SRPT1-S

| Description | Part number |
|------------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Exp valve | 3516273 |
| Evap coil | 3516301 |
| Cond unit | 3526902 |

SFPT1-S

| Description | Part number |
|----------------|-------------|
| Door gasket | 1702635 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Safety switch | 2194235 |
| Leg | 3234039 |
| Hinge | 3234617 |
| Shelf clip | 3234782 |
| Door lock | 3234753 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516322 |
| Exp valve | 3516271 |
| Evap coil | 3516302 |
| Cond unit | 3526910 |
| Wire shelf | 3978170 |
| Rocker switch | 5066440 |

SFPT2-S

| Description | Part number |
|----------------|-------------|
| Door gasket | 1702635 |
| Paragon timer | 2194260 |
| Leg | 3234039 |
| Hinge | 3234617 |
| Shelf clip | 3234782 |
| Door lock | 3234753 |
| Thermometer | 3516148 |
| Evap fan blade | 2162500 |
| Filter dryer | 3516327 |
| Exp valve | 3516317 |
| Evap coil | 3516304 |
| Cond unit | 3526916 |
| Wire shelf | 3978170 |
| Rocker switch | 5066440 |

SRPT1-G

| Description | Part number |
|----------------|-------------|
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Light bulb | 2193928 |
| Lampholder LH | 2193939 |
| Lampholder RH | 2193940 |
| Ballast | 2194161 |
| Temp control | 2194224 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Glass door | 3455479 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516191 |
| Exp valve | 3516273 |
| Evap coil | 3516301 |
| Cond unit | 3526902 |
| Wire shelf | 3579170 |

SRPT1-GS

| Description | Part number |
|----------------|-------------|
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Light bulb | 2193928 |
| Lampholder LH | 2193939 |
| Lampholder RH | 2193940 |
| Ballast | 2194161 |
| Temp control | 2194224 |
| Leg | 3234039 |
| Hinge | 3234617 |
| Shelf clip | 3234782 |
| Door lock | 3234753 |
| Glass door | 3455479 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516322 |
| Exp valve | 3516273 |
| Evap coil | 3516301 |
| Cond unit | 3526902 |
| Wire shelf | 3579170 |

SFPT1-GS

| Description | Part number |
|----------------|-------------|
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Light bulb | 2193928 |
| Lampholder LH | 2193939 |
| Lampholder RH | 2193940 |
| Ballast | 2194578 |
| Leg | 3234039 |
| Hinge | 3234617 |
| Shelf clip | 3234782 |
| Door lock | 3234753 |
| Glass door | 3455479 |
| Thermometer | 3516148 |
| Evap fan blade | 3516172 |
| Filter dryer | 3516322 |
| Evap coil | 3516302 |
| Cond unit | 3526910 |
| Wire shelf | 3579170 |

SRPT2-G

| Description | Part number |
|----------------|-------------|
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Ballast | 2193938 |
| Lampholder | 2194061 |



SUPREMACY REPLACEMENT PARTS LIST

| | |
|----------------|---------|
| Temp control | 2194224 |
| Lampholder | 2194349 |
| Caster | 3234186 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Filter dryer | 3516191 |
| Evap fan blade | 3516274 |
| Evap coil | 3516306 |
| Exp valve | 3516316 |
| Cond unit | 3526904 |
| Wire shelf | 3978170 |

| | |
|--------------------|--------------------|
| SRPT2-GS | |
| Description | Part number |
| Door gasket | 1701292 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Ballast | 2193998 |
| Temp control | 2194224 |
| Leg | 3234039 |
| Hinge | 3234617 |
| Shelf clip | 3234782 |
| Door lock | 3234753 |
| Glass door | 3455479 |
| Thermometer | 3516148 |
| Evap fan blade | 3516174 |
| Filter dryer | 3516322 |
| Exp valve | 3516316 |
| Evap coil | 3516306 |
| Cond unit | 3526904 |
| Wire shelf | 3579170 |

| | |
|--------------------|--------------------|
| SHPT1-S | |
| Description | Part number |
| Door gasket | 1702673 |
| Hi-temp blower | 2162516 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Heating element | 2194605 |
| Relay timer | 2194618 |
| Leg | 3234645 |
| Hinge | 3234617 |
| Shelf clip | 3234639 |
| Door lock | 3234753 |
| Hinge | 3234765 |
| Thermometer | 3516148 |
| Wire shelf | 3978171 |

| | |
|--------------------|--------------------|
| SHPT2-S | |
| Description | Part number |
| Door gasket | 1702673 |
| Blower motor | 2162516 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Heating element | 2194605 |
| Timer relay | 2194618 |
| Leg | 3234645 |
| Chrome hinge | 3234617 |
| SS shelf clip | 3234639 |
| Door lock | 3234753 |
| Chrome hinge | 3234765 |
| Thermometer | 3516148 |

| | |
|--------------------|--------------------|
| Wire shelf | 3978171 |
| SHPT2N-S | |
| Description | Part number |
| Door gasket | 1702676 |
| Blower motor | 2162516 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Heating element | 2194605 |
| Timer relay | 2194618 |
| Leg | 3234039 |
| Chrome hinge | 3234617 |
| SS shelf support | 3234782 |
| Door lock | 3234753 |
| Thermometer | 3516148 |
| Wire shelf heated | 3978173 |

| | |
|--------------------|--------------------|
| SHPT3-S | |
| Description | Part number |
| Door gasket | 1702673 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Leg | 3234645 |
| Chrome hinge | 3234617 |
| Shelf clip s/s | 3234639 |
| Door lock | 3234753 |
| Chrome hinge | 3234765 |
| Thermometer | 3516148 |
| Wire shelf | 3978171 |

| | |
|---------------------|--------------------|
| SHPT2-G | |
| Description | Part number |
| Door gasket | 1701293 |
| Hi-temp blower | 2162516 |
| Rocker switch | 2190154 |
| Lampholder | 2193960 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Heating element | 2194605 |
| Relay timer | 2194618 |
| Leg | 3234645 |
| Chrome plated hinge | 3234617 |
| Shelf clip s/s | 3234639 |
| Door lock | 3234753 |
| Solar thermometer | 3516148 |

| | |
|---------------------|--------------------|
| SRRI1-G | |
| Description | Part number |
| Door gasket | 3455524 |
| Evap fan motor | 2192691 |
| Temp control | 2194224 |
| Ballast | 2194161 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Solar Thermometer | 3516148 |
| Filter dryer | 3516902 |
| Evap fan blade | 3516272 |
| Evap coil | 3516306 |
| Exp valve | 3516273 |
| Cond unit | 3526902 |

| | |
|---------------------|--------------------|
| SRRI2-G | |
| Description | Part number |
| Door gasket | 3455524 |
| Evap fan motor | 2192691 |
| Temp control | 2194224 |
| Ballast | 2193998 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Solar Thermometer | 3516148 |
| Filter dryer | 3516322 |
| Evap fan blade | 3516274 |
| Evap coil | 3516306 |
| Exp valve | 3516316 |
| Cond unit | 35269024 |

| | |
|---------------------|--------------------|
| SRRI2-S | |
| Description | Part number |
| Door gasket | 1702637 |
| Evap fan motor | 2192691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Solar Thermometer | 3516148 |
| Filter dryer | 3516191 |
| Evap fan blade | 3516274 |
| Evap coil | 3516306 |
| Exp valve | 3516316 |
| Cond unit | 3526904 |

| | |
|---------------------|--------------------|
| SRRI3-S | |
| Description | Part number |
| Sill gasket | 1702190 |
| Door gasket | 1702637 |
| Evap fan motor | 2192691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Relay | 2194575 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Solar Thermometer | 3516148 |
| Filter dryer | 3516227 |
| Evap fan blade | 3516274 |
| Evap coil | 3516308 |
| Exp valve | 3516316 |
| Cond unit | 3526906 |

| | |
|----------------------|--------------------|
| SHRT1-G | |
| Description | Part number |
| Door gasket | 1701301 |
| Door gasket | 1702190 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Lampholder | 2193960 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Light bulb | 2194379 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Chrome plated switch | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |
| Thermometer | 3516148 |

| | |
|--------------------|--------------------|
| SHRT2-GS | |
| Description | Part number |
| Door gasket | 1701301 |
| Sill gasket | 1702190 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |

| | |
|---------------------|---------|
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Lampholder | 2193960 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Light bulb | 2194379 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |

| | |
|---------------------|--------------------|
| SHRT2-S | |
| Description | Part number |
| Sill gasket | 1702190 |
| Door gasket full | 1702675 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2174409 |
| Hi-limit | 2194589 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |
| Thermometer | 3516148 |

| | |
|---------------------|--------------------|
| SHRI2-S | |
| Description | Part number |
| Sill gasket | 1702190 |
| Full door gasket | 1702675 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Thermometer | 3516148 |

| | |
|---------------------|--------------------|
| SHRI3-S | |
| Description | Part number |
| Sill gasket | 1702190 |
| Full door gasket | 1702675 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |
| Thermometer | 3516148 |

| | |
|--------------------|--------------------|
| SHRI1-G | |
| Description | Part number |
| Door gasket | 1701301 |
| Sill gasket | 1702190 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |



SUPREMACY REPLACEMENT PARTS LIST

| | |
|---------------------|---------|
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Temp sensor | 2194370 |
| Heated thermostat | 2194372 |
| Control knob | 2194377 |
| Light bulb | 2194379 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |
| Thermometer | 3516148 |

SHRI2-G

| Description | Part number |
|---------------------|-------------|
| Door gasket | 1701301 |
| Sill gasket | 1702190 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Lampholder | 2193960 |
| Temp sensor | 2194370 |
| Heated thermostat | 2194372 |
| Control knob | 2194377 |
| Light bulb | 2194379 |
| Rocker switch | 2194409 |
| Hi-limit | 2194589 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |
| Thermometer | 3516148 |

SRRT1-S

| Description | Part number |
|---------------------|-------------|
| Door gasket | 1702637 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Temp control | 2194224 |
| Momentary switch | 2194341 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |
| Thermometer | 3516148 |
| Expansion valve | 3516172 |
| Filter dryer | 3516191 |
| Evap coil | 3516301 |
| Cond unit | 3526904 |

SRRT2-S

| Description | Part number |
|---------------------|-------------|
| Door gasket | 1701323 |
| Evap fan motor | 2162691 |
| Light bulb | 2194005 |
| Light socket | 2194145 |
| Momentary switch | 2194341 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Thermometer | 3516148 |
| Expansion valve | 3516316 |
| Filter dryer | 3516322 |
| Evap coil | 3516306 |
| Cond unit | 3526906 |

SRRT1-G

| Description | Part number |
|---------------------|-------------|
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Ballast | 2194161 |
| Temp control | 2194224 |
| Lampholder | 2194360 |
| Flour lampholder | 2194361 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |

SRRT1-GS

| Description | Part number |
|---------------------|-------------|
| Door gasket | 3455524 |
| Evap fan motor | 2162691 |
| Rocker switch | 2190154 |
| Ballast | 2194161 |
| Temp control | 2194224 |
| Chrome plated hinge | 3234765 |
| Door lock | 3234753 |
| Thermometer | 3516148 |
| Fan blade | 3516172 |
| Expansion valve | 3516273 |
| Evap coil | 3516301 |
| Filter dryer | 3516322 |
| Cond unit | 3526904 |

SHRT1-S

| Description | Part number |
|---------------------|-------------|
| Full door gasket | 1702675 |
| Fan wheel | 2160005 |
| Electric motor | 2160017 |
| Rocker switch | 2190154 |
| Heating element | 2190273 |
| Light bulb | 2193959 |
| Lampholder | 2193960 |
| Momentary switch | 2194341 |
| Temp sensor | 2194370 |
| Thermostat | 2194372 |
| Control knob | 2194377 |
| Rocker switch | 2194409 |
| Thermostat | 2194589 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Chrome hinge spring | 3234765 |
| Thermometer | 3516148 |

SFR2-G

| Description | Part number |
|---------------------------|-------------|
| Door gasket | 1701292 |
| Fan motor | 2162691 |
| Rocker switch | 2190154 |
| Fan delay/defr. limit | 2194046 |
| Lampholder | 2194061 |
| Heater safety switch | 2194235 |
| Paragon timer | 2194260 |
| Momentary switch | 2194341 |
| Ballast | 2194362 |
| Momentary switch | 2194550 |
| Relay 30A | 2194575 |
| Defrost heater | 2194579 |
| Chrome plated hinge | 3234617 |
| Door lock | 3234753 |
| Spring hinge | 3234765 |
| Temp control | 3516043 |
| Solar digital thermometer | 3516148 |
| Pressure regulator | 3516193 |
| Vacuum breaker | 3516204 |
| Evap coil | 3516304 |
| Expansion valve | 3516317 |
| Cond unit | 3526914 |
| Wire shelf | 3978170 |

SFRT1R-S

| Description | Part number |
|------------------|-------------|
| Door gasket | 1701323 |
| Fan motor | 2183348 |
| Wire heater | 2183791 |
| Safety switch | 2194235 |
| Defrost heater | 2194579 |
| Paragon timer | 2194260 |
| Hinge | 3234617 |
| Drawer/door lock | 3234753 |
| Temp control | 3516043 |
| Thermometer | 3516148 |
| Vacuum breaker | 3516204 |
| Fan blade | 3516274 |
| Evap coil | 3516304 |

STANDARD LABOR GUIDELINES TO REPAIR OR REPLACE PARTS ON DELFIELD EQUIPMENT

Advice and recommendations given by Delfield Service Technicians do not constitute or guarantee any special coverage.

- A maximum of 1-hour is allowed to diagnose a defective component.
- A maximum of 1-hour is allowed for retrieval of parts not in stock.
- A maximum travel distance of 100 miles round trip and 2-hours will be reimbursed.
- Overtime, installation/start-up, normal control adjustments, general maintenance, glass breakage, freight damage, and/or correcting and end-user installation error will not be reimbursed under warranty unless pre-approved with a Service Work Authorization from Delfield. You must submit the number with the service claim.

LABOR OF 1-HOUR IS ALLOWED TO REPLACE:

- | | |
|--|--|
| • Thermostat | • Contactor/Relay |
| • Infinite Switch | • Transformer |
| • Door Jamb Switch | • Evaporator/Condenser Fan Motor and Blade |
| • Solenoid Coil | • Circulating Fan Motor and Blade |
| • Hi-limit/Thermal Protector Switch | • Microprocessor Control |
| • Fan Delay/Defrost Termination Switch | • Water Level Sensor/Probe |
| • Compressor Start Components and Overload Protector | • Door Hinges, Locks, and Gaskets |
| • Defrost Timer | • Condensate Element |
| • Thermometer | • Springs/Lowerator |
| • Gear Box | |

LABOR OF 2 HOURS TO REPLACE:

- | | |
|----------------------------|----------------------|
| • Drawer Tracks/Cartridges | • Defrost Element |
| • Pressure Control | • Heating Element |
| • Solenoid Valve | • Locate/Repair Leak |

LABOR OF 3 HOURS TO REPLACE:

- | | |
|--------------------|--------------------------------|
| • EPR or CPR Valve | • Condenser or Evaporator Coil |
| • Expansion Valve | |

LABOR OF 4 HOURS TO REPLACE

- Compressor

This includes recovery of refrigerant and leak check.

\$35.00 maximum reimbursement for refrigerant recovery (includes recovery machine, pump, torch, oil, flux, minor fittings, solder, brazing rod, nitrogen, or similar fees.)

REFRIGERANTS

- R22 A maximum of \$4.00/lb. or 25¢/oz. will be reimbursed.
- R134A A maximum of \$5.00/lb. or 31¢/oz. will be reimbursed.
- R404A A maximum of \$12.00/lb. or 75¢/oz. will be reimbursed.

Standard One Year Warranty (One year service and labor, two years parts - Supremacy)

The Delfield Company ("Delfield") warrants to the Original Purchaser of the Delfield product (herein called the "Unit") that such Unit, and all parts thereof, will be free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of shipment of the Unit to the Original Purchaser or, if the Original Purchaser returns the warranty card completely filled out including the date of installation within thirty (30) days of receipt of the Unit, one (1) year from the date of installation. During this one year warranty period, Delfield will repair or replace any defective part or portion thereof returned to Delfield by the Original Purchaser which Delfield determines was defective due to faulty material or workmanship. The Original purchaser will pay all labor, crating, freight and related costs incurred in the removal of the Unit of defective component and shipment to Delfield, except that during a period of either ninety (90) days from the date of shipment of the Unit to the Original Purchaser or, if the Original Purchaser returns the warranty card completely filled out including the date of installation within thirty (30) days of receipt of the Unit, ninety (90) days from the date of installation Delfield will pay all related labor costs. Delfield will pay the return costs if the Unit or part thereof was defective.

The term "Original Purchaser" as used herein means that person, firm, association, or corporation for whom the Unit was originally installed.

This warranty does not apply to any Unit or part thereof that has been subjected to misuse, neglect, alteration, or accident, such as accidental damage to the exterior finish, operated contrary to the recommendations specified by Delfield; or repaired or altered by anyone other than Delfield in any way so as to, in Delfield's sole judgement, affect its quality or efficiency. This warranty does not apply to any Unit that has been moved from the location where it was originally installed. This warranty also does not cover the refrigerator drier or the light bulbs used in the Unit. The warranty is subject to the user's normal maintenance and care responsibility as set forth in the Service and Installation Manual, such as cleaning the condenser coil, and is in lieu of all other obligations of Delfield. Delfield neither assumes, nor authorizes any other person to assume for Delfield, any other liability in connection with Delfield's products.

Removal or defacement of the original Serial Number or Model Number from any Unit shall be deemed to release Delfield from all obligations hereunder or any other obligations, express or implied.

Parts furnished by suppliers to Delfield are guaranteed by Delfield only to the extent of the original manufacturer's express warranty to Delfield. Failure of the Original Purchaser to receive such manufacturer's express warranty to Delfield. Failure of the Original Purchaser to receive such manufacturers warranty shall in no way create any warranty, expressed or implied, or any other obligation or liability on Delfield's part in respect thereof.

IF THE CUSTOMER IS USING A PART THAT RESULTS IN A VOIDED WARRANTY AND A DELFIELD AUTHORIZED REPRESENTATIVE TRAVELS TO THE INSTALLATION ADDRESS TO PERFORM WARRANTY SERVICE, THE SERVICE REPRESENTATIVE WILL ADVISE CUSTOMER THE WARRANTY IS VOID. SUCH SERVICE CALLS WILL BE BILLED TO CUSTOMER AT THE AUTHORIZED SERVICE CENTER'S THEN APPLICABLE TIME AND MATERIALS RATES. CONSIDER: CUSTOMER MAY INITIATE A SERVICE AGREEMENT WITHOUT PARTS COVERAGE.

If shipment of a replacement part is requested prior to the arrival in the Delfield factory of the part claimed to be defective, the Original Purchaser must accept delivery of the replacement part of a C.O.D. basis, with credit being issued after the part has been received and inspected at Delfield's plant and determined by Delfield to be within this warranty.

Under no condition does this warranty give the Original Purchaser the right to replace the defective Unit with a complete Unit of the same manufacturer or of another make. Unless authorized by Delfield in writing, this warranty does not permit the replacement of any part, including the motor-compressor, to be made with the part of another make or manufacturer.

No claims can be made under this warranty for spoilage of any products for any reason, including system failure.

The installation contractor shall be responsible for building access, entrance and field conditions to insure sufficient clearance to allow any hood(s), vent(s), or Unit(s) if necessary, to be brought into the building. Delfield will not be responsible for structural changes or damages incurred during installation of the Unit or any exhaust system.

Delfield shall not be liable in any manner for any default or delay in performance hereunder caused by or resulting from any contingency beyond Delfield's control, including, but not limited to, war, governmental restrictions or restraints, strike, lockouts, injunctions, fire, flood, acts of nature, short or reduced supply of raw materials, or discontinuance of the parts by the original part manufacturer.

Except as provided in any Additional Four Year Protection Plan, if applicable, and the Service Labor Contract, if applicable, the foregoing is exclusive and in lieu of all other warranties, whether written or oral, express or implied. This warranty supersedes and excludes any prior oral or written representations or warranties. Delfield expressly disclaims any implied warranties of merchantability, fitness for a particular purpose of compliance with any law, treaty, rule or regulation relating to the discharge of substances into the environment. The sole and exclusive remedies of any person relating to the Unit, and the full liability of Delfield for any breach of this warranty, will be as provided in this warranty.


Other than this Delfield Standard One Year Limited Warranty, any applicable Delfield Additional Four Year Protection Plan or applicable Delfield Service Labor Contract, the Original Purchaser agrees and acknowledges that no other warranties are offered or provided in connection with or for the unit or any other part thereof.

In no event will Delfield be liable for special, incidental or consequential damages, or for damages in the nature of penalties.

IF DURING THE WARRANTY PERIOD, CUSTOMER USES A PART FOR THIS DELFIELD EQUIPMENT OTHER THAN AN UNMODIFIED NEW OR RECYCLED PART PURCHASED DIRECTLY FROM DELFIELD OR ANY OF ITS AUTHORIZED SERVICE CENTERS AND/OR THE PART BEING USED IS MODIFIED FROM ITS ORIGINAL CONFIGURATION, THIS WARRANTY WILL BE VOID. FURTHER, DELFIELD AND ITS AFFILIATES WILL NOT BE LIABLE FOR ANY CLAIMS DAMAGES OR EXPENSES INCURRED BY THE CUSTOMER WHICH ARISE DIRECTLY OR INDIRECTLY, IN WHOLE OR IN PART, DUE TO THE INSTALLATION OF ANY MODIFIED PART AND/OR PART RECEIVED FROM AN UNAUTHORIZED SERVICE CENTER. If the warranty becomes void, Customer may purchase from Delfield, if available, a Service Agreement or service at the then current time and materials rate.

For more information on Delfield warranty's log on and check out the service section of our web site at www.delfield.com.

NOTES:

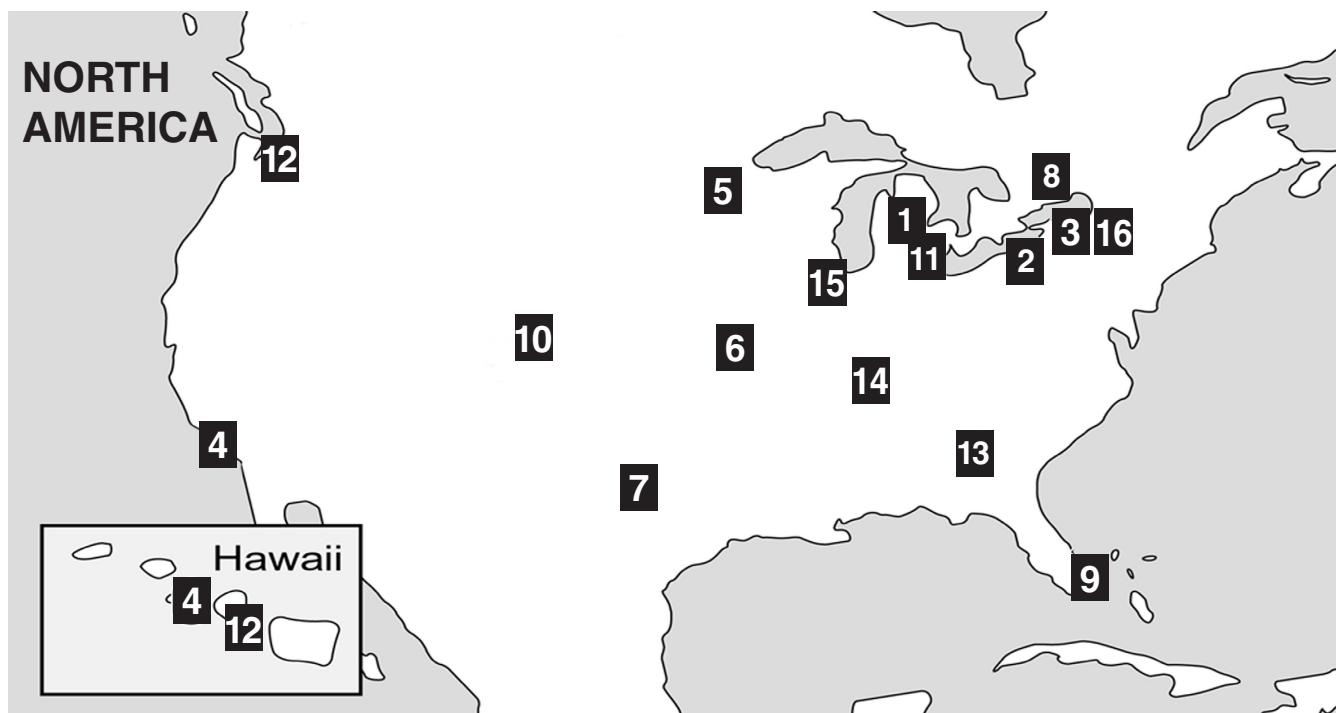

Delfield has 16 conveniently located Parts Depots to ensure parts are handled promptly and accurately.

| | | | |
|--|--|--|---|
| 1) The Delfield Company 980 South Isabella Road Mt. Pleasant, MI 48858 800.733.8829 989.773.7981 989.773.3210 FAX custom parts direct from Delfield | 2) A.I.S. Commercial Parts & Service 1816 West 26th Street Erie, PA 16508-1149 800.332.3732 814.456.3732 814.452.4843 FAX serves: MD, NJ, OH, PA, VA, WV | 3) Appliance Installation Service 1336 Main Street Buffalo, NY 14209 800.722.1252 716.884.7425 716.884.0410 FAX serves: CT, DC, DE, MA, MD, ME, NH, NJ, NY, PA, RI, VA, VT, WV | 4) Pacific Coast Parts 15024 Staff Court Gardena, CA 90248 800.531.1111 800.782.5747 Email: orders@pacparts.com www.pacparts.com serves: AZ, CA, HI, NV, OR |
| 5) Contract Ice 14450 Ewing Ave S. #100 Burnsville, MN 55306 800.422.2823 952.894.4427 952.894.2164 FAX serves: IA, MN, MT, ND, SD, WI | 6) E.M.C.O. Sales & Distributors 3909 St. Timothy Lane St. Ann, MO 63074 800.972.7670 314.427.7477 314.427.8190 FAX serves: AR, IA, IL, KS, KY, MO, NE, OK, TX, NM, LA | 7) Stove Parts Supply/GCS Service 2120 Solona St. PO Box 14009 Fort Worth, TX 76117-0009 800.433.1804 800.272.7358 fax serves: AR, LA, NM, OK, TX | 8) Garland Group 1177 Kamato Road Mississauga, Ontario L4W1X4 800.427.6668 800.361.7745 FAX serves: Canada |
| 9) Global Parts and Supplies 2920 N.W. 109th Avenue Miami, FL 33172 305.994.9994 305.994.9992 FAX International parts depot | 10) Hawkins Commercial Appl. Serv. 3000 S. Wyandot Englewood, CO 80110 800.624.2117 303.761.8861 FAX serves: AZ, CO, KS, NE, NM, OK, UT, WY | 11) MicroDine, Inc. 44792 Helm Plymouth, MI 48170 888.828.4454 734.451.2043 734.451.3215 FAX serves: MI, IN, WI, OH | 12) Performance Refrigeration Parts 9923 S.W. 178th St. Vashon, WA 98070 888.872.2465 206.463.1772 206.463.4431 FAX serves: AK, HI, ID, MT, OR, WA |
| 13) Southeastern Restaurant Services 2200 Norcross Parkway, Suite 210 Atlanta, GA 30071 800.235.6516 770.446.6177 770.446.3157 FAX serves: FL, GA, MS, NC, SC, VA | 14) T.M.A. 2916 Sidco Drive Nashville, TN 37204 615.726.0351 800.737.0351 615.259.4100 FAX serves: TN, AL | 15) Heritage Food Serv. Equip. Inc. 5130 Executive Blvd. Fort Wayne, IN 46808 800.458.5593 800.800.4981 FAX serves: IL, IN, MI, OH, WI | 16) Northern Parts & Service 21 Northern Avenue Plattsburgh, NY 12903 800.634.5005 800.782.5424 FAX serves: CT, DC, DE, MA, MD, ME, NH, NJ, NY, PA, RI, VA, VT, WV |



980 S. Isabella Rd., Mt. Pleasant, MI 48858, U.S.A. • (989) 773-7981 or (800) 733-8829 • Fax (989) 773-3210 • www.delfield.com
 Delfield reserves the right to make changes in design or specifications without prior notice. ©2004 The Delfield Company. All rights reserved. Printed in the U.S.A.